



The SnapVend Locker Installation Guide

1. Turn off both Vending Machine & Locker.
2. Update the Vending Machine Software to the latest 2.30 or later to support locker.
3. Run the locker cable from vending machine to the locker.
 - a. Plug the black 4 pins connector to the Vending machine controller board.

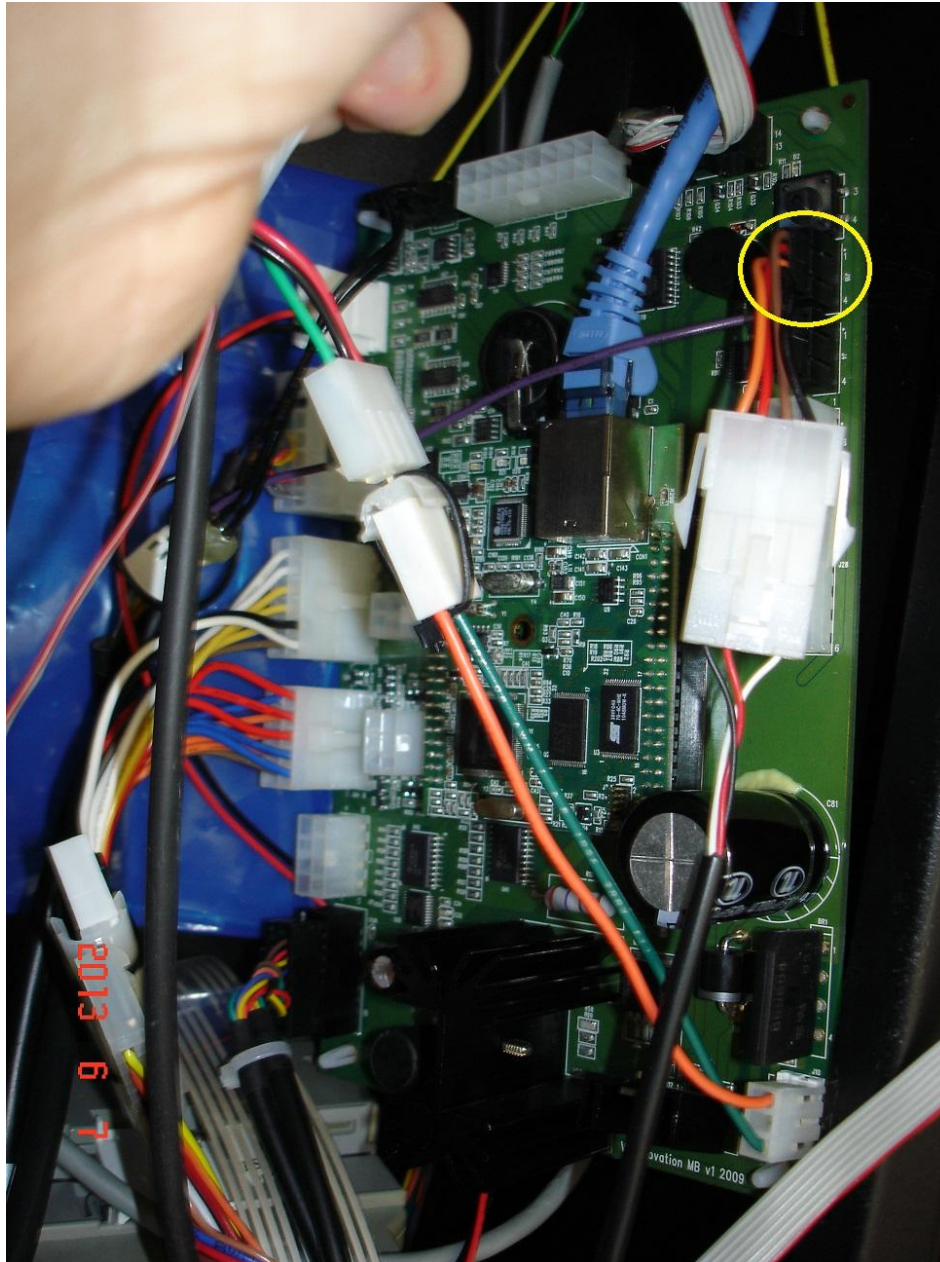


- b. Run the cable thru the vending machine.

The location as seen in the picture below is @ the lower right of the vending machine.

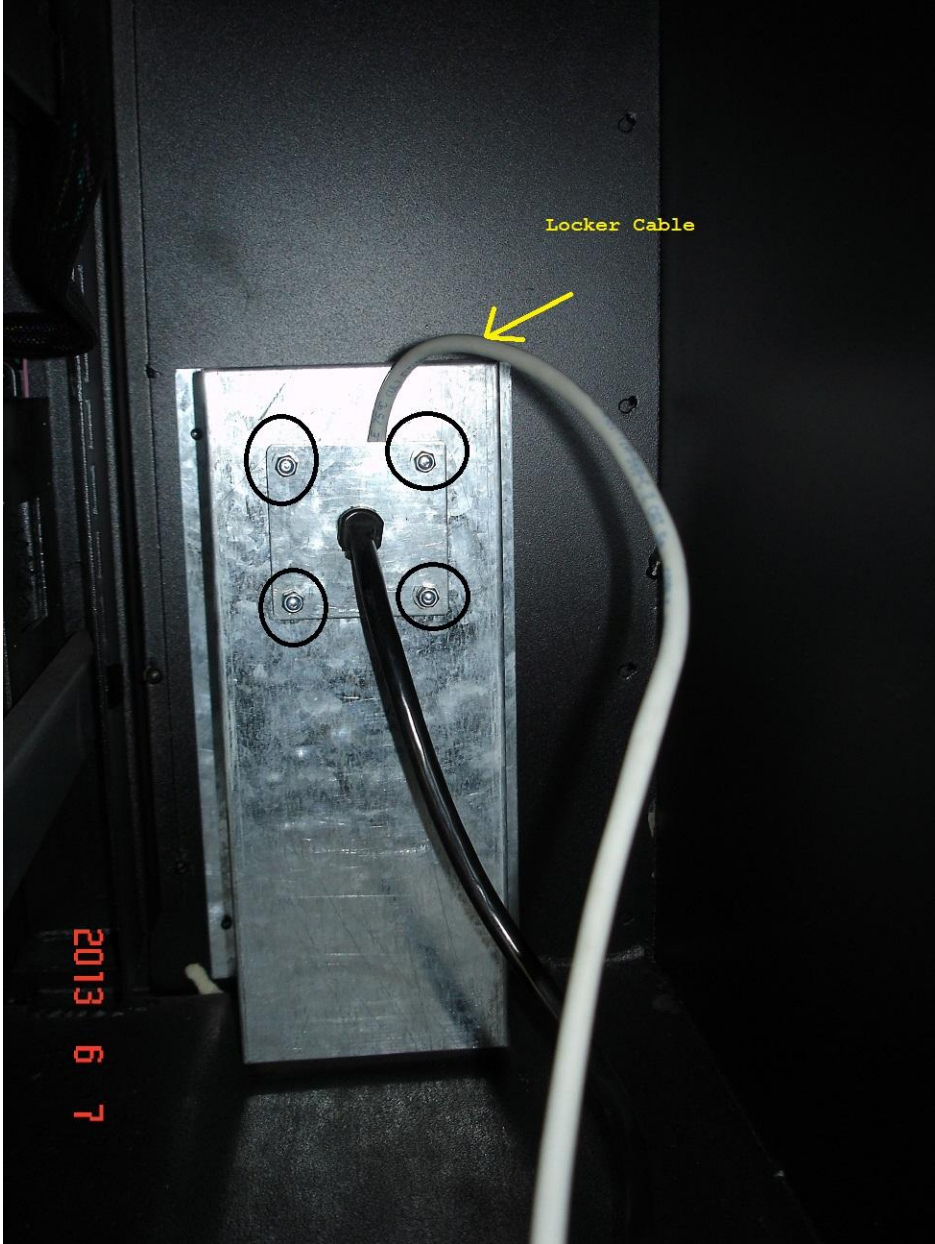

View from the back of the vending machine.

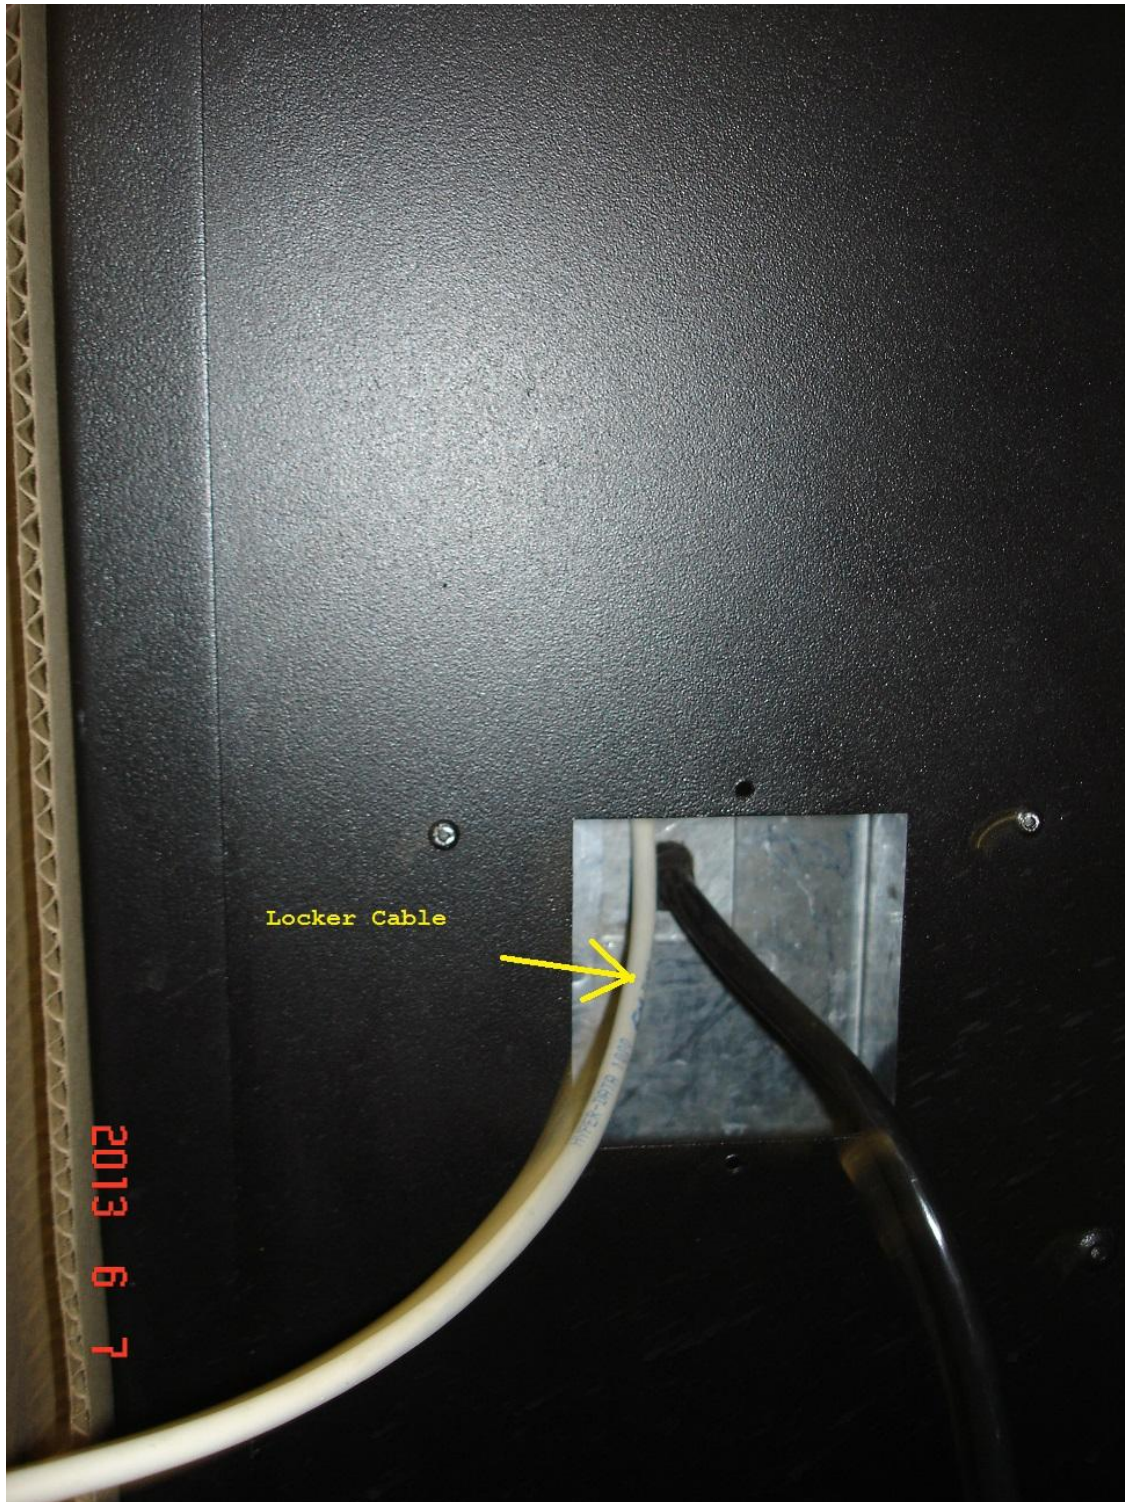

4. Setup the DIP Switch on the locker controller board.



5. Done! & turn the power on!